
3onedata

IES615-2DI(3IN1) Series Managed Industrial Ethernet Switch Quick Installation Guide

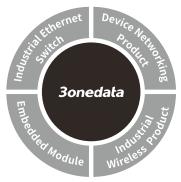

3onedata Co., Ltd.

- Address: 3/B, Zone 1, Baiwangxin High Technology Industrial Park, Xili, Nanshan District, Shenzhen Website: www.3onedata.com
- Tel: +86 0755-26702688
- Fax: +86 0755-26703485

[Package Checklist]

Please check whether the package and accessories are intact while using the switch for the first time.

- 1. Industrial Ethernet switch
- 2. Certification

Warranty card

4.

- 3. Quick installation guide
 - DIN-Rail mounting attachment

If any of these items are damaged or lost, please contact our company or dealers, we will solve it ASAP.

[Product Overview]

5.


The product is managed DIN-Rail industrial Ethernet switch. Models as follows:

Model I. IES615-2DI(3IN1) (5 100M Copper Ports + 2 3IN1 Serial Ports with isolation)


Model II. IES615-1F-2DI(3IN1) (4 100M Copper Ports + 1 100M Fiber Port + 2 3IN1 Serial Ports with isolation) Model III. IES615-2F-2DI(3IN1) (3 100M Copper Ports + 2 100M Fiber Ports + 2 3IN1 Serial Ports with isolation)

[Panel Design]

> Top view, Bottom view and Rear view

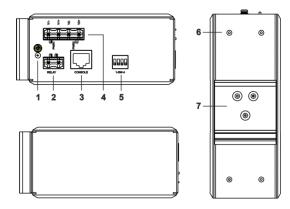

Front view

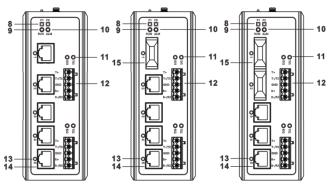


- 1. Grounding screw
- 2. Relay alarm output terminal block
- 3. Console port
- 4. Power input terminal block
- 5. DIP switch
- 6. Wall-mounting location hole
- 7. DIN-Rail mounting kit
- 8. Power supply input status indicator P1/P2
- 9. Device running indicator RUN
- 10. Relay alarm indicator ALM
- 11. Serial port transmit-receive indicator
- 12. RS-232/485/422 3IN1 serial port

- 13. Ethernet port connection indicator
- 14. 10/100Base-T(X) Ethernet port

[Mounting Dimension]

Unit: mm

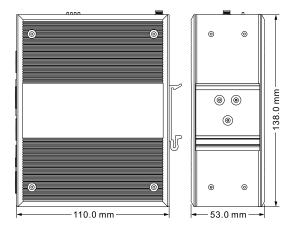


Attention before Mounting:

- Don't place or install the device in area near water or moist, keep the relative humidity of the device surrounding between 5%~95% without condensation.
- Before power on, first confirm the supported power supply specification to avoid over-voltage damaging the device.
- The device surface temperature is high after running; please don't directly contact to avoid scalding.

【DIN-Rail Mounting】

For convenient usage in industrial environments, the product adopts 35mm DIN-Rail mounting, mounting steps as below:

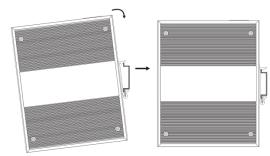

- Step 1 Check if the DIN-Rail mounting kit is installed firmly.
- Step 2 Insert the bottom of DIN-Rail mounting kit (one side with spring support) into DIN-Rail, and then insert the top into DIN-Rail.

Tips:

Insert a little to the bottom, lift upward and then insert to the top.

Step 3 Check and confirm the product is firmly installed on DIN-Rail, then mounting ends.

【Disassembling DIN-Rail】

- Step 1 Power off the device.
- Step 2 After lift the device upward slightly, first shift out the top of DIN-Rail mounting kit, then shift out the bottom of DIN-Rail, disassembling ends.

[Power Supply Connection]

DC power supply

 


The series devices provide 4 bits power supply input terminal blocks and two independent DC power supply systems for PWR1 and PWR2. The power supply has nonpolarity and anti-reverse functions,

it can normally operate after reverse connection. Power supply range: 12 ${\sim}48\text{VDC}$

[Serial Port Connection]

> 3IN1 serial port



This series provide 5.08mm pitch 5 pins industrial terminal blocks and support

RS-232/RS-485/RS-422 serial connection. Definition of pins

as the table below:

PIN	1	2	3	4	5
RS-485	D+	D-	GND	_	—
RS-422	T+	Т-	GND	R+	R-
RS-232		ТΧ	GND		RX

[Relay Connection]



Relay terminals are a pair of normally open contacts in device alarm relay. They are open

RELAY circuit in normal non alarm state, closed when any alarm information occurs. Such as: it's closed when power off, and send out alarm. This series switches support 1 channel relay alarm information output, support DC power alarm information or network abnormal alarm output, it can be connected to alerting lamp, alarm buzzer, or other switching value collecting devices for timely warning operating staffs when alarm information occurs.

[DIP Switch Settings]



Provide 4-bits DIP switch for function setting, where "ON" is enable valid terminal. DIP switch definition as follows:

DIP	Definition	Operation
1	Reserved	-
2	Restore	Set the DIP switch to ON, the
	factory	device will automatically reboot
	defaults	and restore factory defaults, and
		then set back the DIP switch.
3		Set the DIP switch to ON, the
	Upgrade	device will be automatically
		upgraded, and then set back the
		DIP switch.
4	Reserved	-

[Console Port Connection]

The device provides 1 channel procedure debugging port based on serial port, and can conduct device CLI command line management after connected to PC. The interface adopts

RJ45 port, the RJ45 pin definition is as follows:

Pin No.	2	3	5
Definition	TXD	RXD	GND

[Checking LED Indicator]

The function of each LED is described in the table as below:

LED	Status	Description	
P1	ON	PWR1 is connected and running normally	
	OFF	PWR1 is disconnected and running abnormally.	
P2	ON	PWR2 is connected and running normally	
P2	OFF	PWR2 is disconnected and running abnormally	
ALM	ON	Power supply, port link alarm	
	OFF	Power supply, port link without alarm	
	ON	The device is powered on or the device is abnormal.	
RUN	OFF	The device is powered off or the device is abnormal.	
	Blinking	System is running well.	
	ON	Ethernet port connection is active.	
Link/ACT (1-5)	Blinking	Data transmitted	
	OFF	Ethernet port connection is inactive.	
тх	Blinking	Serial port sends data abnormally	
	OFF	Serial port sends data normally	
RX	Blinking	Serial port receives data abnormally	
ΓΛ	OFF	Serial port receives data normally	

【Logging in to WEB Interface】

This device supports WEB management and configuration. Computer can access the device via Ethernet interface. The way of logging in to device's configuration interface via IE browser is shown as below:

- Step 1 Configure the IP addresses of computer and the device to the same network segment, and the network between them can be mutually accessed.
- Step 2 Enter device's IP address in the address bar of the

ide 5.08mm pitch

computer browser. http://192.168.1.254/ Enter device's username and password in the login Step 3 window as shown below. x Windows Security The server 192.168.1.254 is asking for your user name and password. The server reports that it is from Communication Device. Warning: Your user name and password will be sent using basic authentication on a connection that isn't secure. admin Remember my credentials OK Cancel

Step 4 Click "OK" button to login to the WEB interface of the device.

Note:

- The default IP address of the device is "192.168.1.254".
- The default username and password of the device is "admin".
- If the username or password is lost, user can restore it to factory settings via device DIP switch or management software; all modified configurations will be cleared after restoring to factory settings, so please backup configuration file in advance.
- Please refer to user manual for specific configuration method of logging in to WEB interface and other configurations about network management function.

[Specification]

	Panel		
--	-------	--	--

	10/100Base-T(X) self-adapting
	RJ45 port, full/half duplex
100M copper port	self-adapting or specified
	operating mode, support
	MDI/MDI-X self-adaption
100M fibor port	100Base-FX, support SC/ST/FC
100M fiber port	interface
Serial port	Isolated RS-232/RS-485/RS-422
	3IN1 serial port
Console port	CLI command management port
	(RS-232), RJ45
	2 pins 7.62mm pitch terminal
	blocks, support 1 relay alarm
Alarm interface	information output, current load
	capacity of 1A/24VDC,
	0.5A/120VAC
	Power indicator, run indicator,
Indicator	interface indicator, alarm
malcator	indicator and serial port
	transmit-receive indicator
Exchange attributes	
Backplane bandwidth	1.2G
Dealertheiter alma	
Packet buffer size	0.5Mbit
MAC table size	0.5Mbit 2K
MAC table size	
MAC table size	2К
MAC table size	2K 12~48VDC; support dual power
MAC table size Power supply	2K 12~48VDC; support dual power supply redundancy, nonpolarity,
MAC table size Power supply	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and
MAC table size Power supply	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A protection
MAC table size Power supply Input power supply	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A protection
MAC table size Power supply Input power supply Access terminal Consumption	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A
MAC table size Power supply Input power supply Access terminal	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A protection 4-pin 7.62mm pitch terminal block
MAC table size Power supply Input power supply Access terminal Consumption IES615-2DI(3IN1)	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A protection 4-pin 7.62mm pitch terminal block No-load: 2.14W@24VDC
MAC table size Power supply Input power supply Access terminal Consumption	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A protection 4-pin 7.62mm pitch terminal block No-load: 2.14W@24VDC Full-load: 2.71W@24VDC
MAC table size Power supply Input power supply Access terminal Consumption IES615-2DI(3IN1)	2K 12~48VDC; support dual power supply redundancy, nonpolarity, anti-reverse connection and built-in overcurrent 3.0A protection 4-pin 7.62mm pitch terminal block No-load: 2.14W@24VDC Full-load: 2.71W@24VDC No-load: 2.54W@24VDC

Working environment	
Working temperature	-40℃~75℃
Storage temperature	-40° ℃~ 85° ℃
Working humidity	5%~95% (no condensation)
Protection grade	IP40 (aluminum shell)