
3onedata

ES209G-1GF **Unmanaged Ethernet Switch Quick** Installation Guide

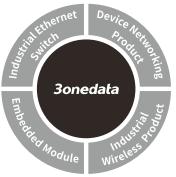

3onedata Co., Ltd.

| Address: | 3/B, Zone 1, Baiwangxin High Technology | | |
|----------|--|--|--|
| | Industrial Park, Xili, Nanshan District, | | |
| | Shenzhen | | |
| Website: | www.3onedata.com | | |
| Tel: | +86 0755-26702688 | | |
| Fax: | +86 0755-26703485 | | |

[Package Checklist]

Please check whether the package and accessories are intact while using the switch for the first time.

- Industrial Ethernet switch 1. 3.
 - Quick installation guide
- **DIN-Rail mounting attachment** 5.
- blocks

2.

4.

6.

Certification

Terminal

Warranty card


If any of these items are damaged or lost, please contact our company or dealers, we will solve it ASAP.

[Product Overview]


The product is full Gigabit unmanaged DIN-Rail Ethernet switch. Module as follows: ES209G-1GF (8 Gigabit copper ports + 1 Gigabit fiber port).

[Panel Design]

Rear view, Top view and Bottom view

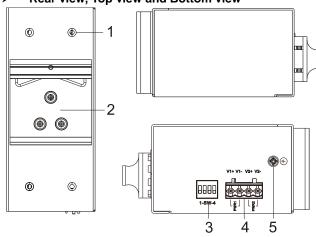


Front view and Side view

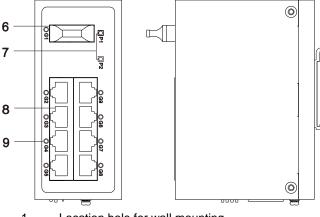

- Location hole for wall mounting 1.
- 2. **DIN-Rail mounting kit**
- 3. **DIP** switch
- 4. Power input terminal block
- 5. Grounding screw
- 6. 1000Base-X Gigabit Ethernet fiber port
- 7. Power supply input status indicator
- 8. 10/100/1000Base-T(X) Ethernet port
- 9 Interface indicator

[Mounting Dimension]

Unit: mm

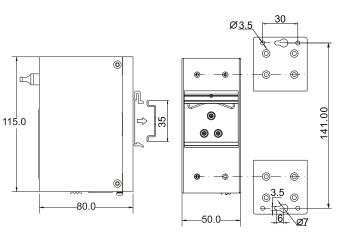


Attention before mounting:

- Don't place or install the device in area near water or moist, keep the relative humidity of the device surrounding between 5%~95% without condensation.
- Before power on, first confirm the supported power . supply specification to avoid over-voltage damaging the device.
- The device surface temperature is high after running; please don't directly contact to avoid scalding.

[DIN-Rail Mounting]

For convenient usage in industrial environments, the product adopts 35mm DIN-Rail mounting, mounting steps as below:

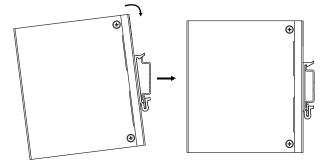

Step 1 Check if the DIN-Rail mounting kit is installed firmly. Insert the bottom of DIN-Rail mounting kit (one side Step 2 with spring support) into DIN-Rail, and then insert the top into DIN-Rail.

Tips:

Insert a little to the bottom, lift upward and then insert to the top.

Check and confirm the product is firmly installed on Step 3 DIN-Rail, then mounting ends.

【Disassembling DIN-Rail】


- Step 1 Device power off.
- After lift the device upward slightly, first shift out the Step 2 top of DIN-Rail mounting kit, then shift out the bottom of DIN-Rail, disassembling ends.

Attention before power on:

- Power ON operation: first connect power line to the • connection terminal of device power supply, then power on.
- Power OFF operation: first unpin the power plug, then remove the power line, please note the operation order above.

[Power Supply Connection]

≻ DC power supply

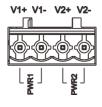

V1+ V1- V2+ V2- The device provides 4 pins 7.62mm pitch power supply input terminal blocks and two independent DC power supply systems for PWR1 and PWR2. The power supply supports anti-reverse connection. Power supply range: 12~48VDC

[DIP Switch Settings]



The device provides 4 pins DIP switches for function settings, where "ON" is enable valid terminal. Please power off and power on after

changing the status of DIP switches. DIP switches definition as follows:

| DIP | Definition | Operation |
|-----|----------------|---------------------------------|
| 1 | Flow control | Set the DIP switch to ON |
| 2 | Reserved | - |
| 3 | Port isolation | Set the DIP switch to ON, fiber |
| | | |

| DIP | Definition | Operation |
|-----|------------|---------------------------------|
| | | port can communicate with |
| | | copper port. Copper ports can't |
| | | communicate with each other. |
| 4 | Reserved | - |

【Checking LED Indicator】

The function of each LED is described in the table as below:

| LED | Status | Description |
|----------|----------|---------------------------------------|
| | ON | P1/P2 is running normally |
| P1/P2 | OFF | P1/P2 is disconnected and running |
| | | abnormally. |
| | ON | Ethernet port connection is active. |
| Link/Act | Blinking | Data transmitted |
| (G1-G9) | OFF | Ethernet port connection is inactive. |

[Specification]

| Panel | |
|---------------------|-----------------------------------|
| | 10/100/1000Base-T(X), RJ45, |
| Circhit conner nert | automatic flow control, full/half |
| Gigabit copper port | duplex mode, MDI/MDI-X |
| | autotunning |
| Gigabit fiber port | 1000Base-X, SC interface |
| Indicator | Power indicator, interface |
| | indicator |
| Exchange attributes | |
| Backplane bandwidth | 20G |
| Packet buffer size | 1Mbit |
| MAC table size | 8К |
| Power supply | |
| | 24VDC (12~48VDC) |
| | Support dual power supplies |
| Input power supply | redundancy, |
| | reverse-connection protection |
| Access terminal | 4 pins 7.62mm pitch terminal |
| | blocks |
| Consumption | |
| No-load | 3.9W@24VDC |

| Full-load | 8.1W@24VDC |
|---------------------|--------------------------|
| Working environment | |
| Working temperature | 0~55℃ |
| Storage temperature | -10~65℃ |
| Working humidity | 5%~95% (no condensation) |
| Protection grade | IP30 (metal shell) |